

Product Instructions: Varicase2, Lynester & Eco-Vision notice boards

Wall mounted versions

FIXINGS = 4 x No.10 3" countersunk screws, washers, wall plugs and screw cups (per door)

Before beginning installation you **MUST** check that all of the fixings provided are suitable for the wall material you are fixing into. If they are not suitable please use alternative fixings. **We cannot be held responsible for any damage caused from incorrect fixings being used during installation.** If you have an external header panel this should be fitted **before fixing the notice board to the wall.** The header will be pre-fitted with fixings to attach directly to the top of the notice board. Position the header over the holes in the top outer frame (which will have threaded receivers pre-fitted). Now fix the header to the notice board by screwing the threaded bolts taped to the header, through the pre-drilled holes in the header and into the receivers on the top of the board. To install the notice board to the wall, open the door(s) and drill a suitably sized hole in each corner of the pin board or magnetic panel and into the wall. Remove the unit from the wall and insert the wall plugs into the holes in the wall. Re-position the board over the wall plugs, **ensuring the pre-drilled drainage holes are positioned on the BOTTOM edge.** Screw the board into the wall, with the black rubber washers supplied, positioned between the case and the wall and the silver screw cup between the screw head and the pin board/magnetic insert. **If you are installing the notice board outside, you will need to seal the ALL the wall fixing holes, by coating screws in exterior grade silicone before screwing to the wall.**

Post mounted versions

FIXINGS = post cap screws (threaded bolts if supplied with header panel)

Your notice board is supplied with post infill attached to each side of the frame. Ensuring you have a flat, soft, and non-abrasive surface, lie the posts down either side of the notice board and slide the notice board into the post channels using the infill provided, **ensuring the pre-drilled drainage holes are positioned on the BOTTOM edge.** If you have a header panel slide this into the posts next. Now secure the assembly by screwing on the post caps using the screws supplied. Concrete your post(s) into suitable sized and spaced holes, with a minimum recommended depth of $\frac{1}{4}$ of the overall post length, and no less than 600mm. If you have been supplied with standard 3000mm posts you may need to calculate how much post is required and cut them down using a hacksaw. **Please ensure that your posts are not leaning forward or backwards as this can compromise the weather resistance of your notice board.** If you are surface mounting, use the supplied base plates to drill 4 x 10mm holes per base and fix using 10mm wall bolts (not supplied for safety reasons).

Rail mounted versions

FIXINGS = 2 x ARC per channel, with bolts, nuts and washers

Your notice board has been supplied with channel attached to the rear face along with the most suitable size of anti-rotational clips (ARC) we hold in stock. Before beginning installation you **MUST** check that all the fixings provided are suitable for the railings you are fixing on to. If they are not suitable please use alternative fixings. **We cannot be held responsible for any damage caused from incorrect fixings being used during installation.** Offer the notice board up to the railings **ensuring the pre-drilled drainage holes are positioned on the BOTTOM edge.** Now fit the ARC around your railings and tighten the bolts supplied with them to secure. If you have a header and/or footer panel, use the ARC taped to the header panel (for transportation) and repeat the steps above to fit to railings.

Mains powered illumination – additional information (Lynester/Eco-Vision only)

Illuminated versions are not provided with an entry hole or power cable as standard, as this may not suit the customer's own site and installation conditions. **Electrical installation should be carried out by a qualified electrician and work to the current recommended CE standards.** The mains cable should also meet the necessary UK standards with the cable inlet hole is sealed with **exterior grade silicone** to prevent water ingress.

Eco-Vision Solar Powered LED illumination – additional information

To get the best lighting performance from your product avoid shadows from trees, building structures, etc. After the notice board has been installed the solar panel circuitry must be activated. The on/off switch for this is found to the underside of the upper lighting section inside the door. This will be clearly labelled. Where an internal diffuser is fitted, remove the diffuser retaining screws and diffuser to access the switch. Once switched to the 'on' position, the charge controlling and automatic regulation of the illumination will not require any further assistance. Clean the exterior surface of the solar panel on a regular basis, or if soiled.

For any further assistance with installing this product please contact your sales representative.

Please turn over for information on maintaining your 5 Year Guarantee

Last Updated: Apr 2017

Product Guarantee

All our exterior glazed products are covered by a 5 Year guarantee as standard. This covers defective parts and/or labour with the exception of the pin board core and fabric coverings*, and is based on normal operating conditions within the UK and Republic of Ireland.

Powder coated finishes are applied to the standards of the powder coating suppliers. Colour fastness and corrosion resistance is dependent on the location and atmospheric conditions. Therefore, our guarantee is limited to corrosion resistance only in line with our powder coating suppliers' specifications, with the following provisions:

1. Products with powder coated finishes that are installed within 1 mile of a coastal location** must also have the extra coastal intermediate primer protection applied to the external finish.
2. Products with Satin Silver, Polished Gold or Polished Silver finishes that are installed within 1 mile of the coast must also have the additional clear powder coating applied to the external finish.

The guarantee is offered on the basis that any faulty product is returned to the factory to assess and/or remedy, with prior written agreement of the manufacturer. Photographic evidence may be required before the product is returned. The 5 Year guarantee does not cover consequential losses or expenses. If the product has been modified or tampered with other than as expressed in the instructions, or notified and agreed by the manufacturer, the manufacturer reserves the right to void the guarantee.

To maintain your 5 Year Guarantee, please ensure the products are:

- A. Installed as directed in the instructions we provide**
- B. Well maintained and cleaned regularly*** using guidance information stated below**

IMPORTANT Maintenance Information

Locks, hinges and stays need regular lubrication with a spray lubricant such as WD-40. This is particularly important if the locks, hinges or stays shown any signs of sticking or creaking.

NO CHEMICALS should be used to clean any part of your notice board. It should only be cleaned with soap and water and a damp soft cloth. Alternatively use Autoglym Fast Glass spray which has been approved for use with our products (available from your sales representative). Use of any cleaning or chemical agents including solvents will invalidate your 5 Year guarantee.

** As well as highly industrial locations, indoor swimming pools or any other locations with high levels of Sulphur Dioxide or other abrasive atmospheres.

*** Frequency of cleaning will depend on local conditions, but the minimum recommendation is twice a year. In most cases, regular cleaning will also help your product looking its best beyond the 5 Year Guarantee.

